



Crēdo PROMED™

THERMAL PACKAGING SOLUTIONS



THERMALLY PROTECTED MEDICAL TRANSPORTERS

Designed specifically for the dynamic needs of pharmaceutical reps and first responders, the Crēdo ProMed™ product line currently consists of three different sized temperature-controlled portable medical transport bags that thermally protect the integrity of valuable pharmaceutical samples and medical supply payloads for 72 - 96 hours.

The outer bag is constructed of highly durable ballistic nylon fabric and the patented TIC™ panels with phase change material and VIP components contained within, are qualified to consistently protect medical materials such as blood, platelets, and commercial bio-pharma product samples within two ranges (2-8°C and 15-25°C).

MATERIALS



Outer Container:

Ballistic Nylon Fabric with high quality faux leather trim accents and durable web strapping and secure buckles

Color Options:

Standard Tan*

*Other colors available upon request

CRÉDO PROMED™

DURATION

72 - 96 HOURS

SERIES 4

TEMPERATURE

2°C to 8°C

VOLUMES

2L, 4L, 8L

SERIES 22

TEMPERATURE

15°C to 25°C

VOLUMES

2L, 4L, 8L

CRÉDO PROMED™ SERIES

In response to an identified need by pharmaceutical clients, we developed a dependable, easy-to-use “load and go” thermal protection soft-side bag.

The Crêdo ProMed™ is the same patented passive thermal protection technology that is part of the Crêdo Cube™ product family and is now available in three convenient payload volume sizes. These hand portable, highly durable and convenient to use soft-sided bags offer:

- **Easy conditioning** of the TIC™ system panels which makes the ProMed a simple, nimble, and consistently reliable option. Once the TIC™ system panels are staged and properly placed inside the VIP (vacuum insulated panels) assembly, simply insert payload content and be on your way
- **Rugged and sturdy** supportive interior side panels, double-stitched seams, reinforced protective corners, durable buckle straps, comfortable padded shoulder strap and a water and soil resistant protective bottom panel
- **A sophisticated design** with a clear view pocket for business essentials and a sturdy elastic back strap designed to slip effortlessly over telescoping handles enabling secure transport on top of wheeled bags



2 LITERS PAYLOAD




4 LITERS PAYLOAD



8 LITERS PAYLOAD

Type	Liters	Exterior Dimensions - Inches	Interior Dimensions - Inches	Tare Weight - lbs
SERIES 4				
Series 4	2L	10 x 9 x 8	6 x 5 x 4	8
Series 4 472	4L	12 x 12 x 11	6 x 6 x 6	12
Series 4 872	8L	16 x 11 x 11	11 x 7 x 7	18
SERIES 22				
Series 22C	2L	10 x 9 x 8	6 x 5 x 4	8
Series 22C 472	4L	12 x 12 x 11	6 x 6 x 6	12
Series 22C 872	8L	16 x 11 x 11	11 x 7 x 7	22

Series 4 - 424, Unit 1, ISTA Summer Thermal Performance
(Control Set: ISTA TD Summer Profile, No Payload, -16°C to 2°C TIC Conditioning, No TIC Staging)
Source: MTS Lab 14 April 2014

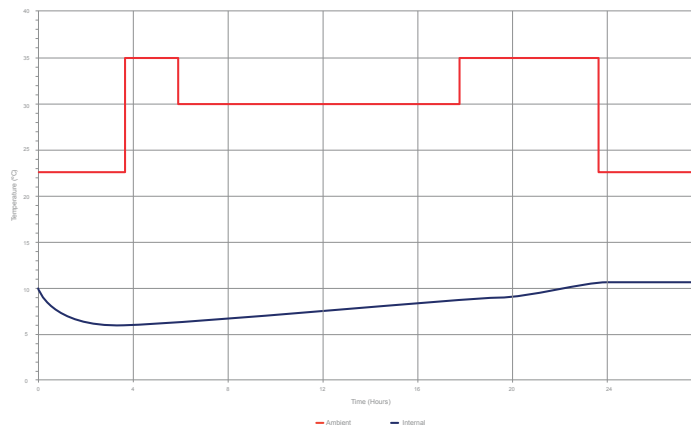

FOR MORE INFORMATION ABOUT PELICAN BIOTHERMAL PRODUCTS, PLEASE CONTACT:

INFO@PELICANBIOTHERMAL.COM T: +1 763 412 4800 PELICANBIOTHERMAL.COM

ISO17025, ISO9001-2008 Accredited

Golden Hour™, TIC™, Crêdo™, Crêdo Cube™, Crêdo ProEnvision™, Crêdo Xtreme™, Crêdo DURACUBE™, Crêdo ProMed™, Sherpa™ Systems, Chronos™ Express, Chronos™ Advance and CoolPall™ Vertos are registered trademarks of Pelican Products, Inc., its subsidiaries and/or affiliates.



©2018 PELICAN BioThermal all rights reserved.