



Crēdo™

XTREME



PALLET BULK SHIPPER

INTRODUCING OUR HIGH PERFORMANCE, EXTREMELY DURABLE PASSIVE TEMPERATURE-CONTROLLED FULL AND HALF PALLET SHIPPING CONTAINER.

This high performance, extremely durable and reusable passive temperature-controlled pallet shipper is offered in two sizes and is ideal for consolidating large domestic and international cargo shipments. Pelican BioThermal's Crēdo™ patented technology provides a revolutionary cost effective temperature-controlled pallet shipper that ensures secure transport of high value pharmaceutical and biotech products – qualified to maintain the required temperature range for 96 - 144 hours. Easy removal and installation of the TIC™ (PCM) system for conditioning provides a significant return on investment with less labor costs, greater volumetric payload size, and reduced risk of product compromise.

Product Design Features

- Crēdo™ modular design, full stack pallet system easily converts to half pallet for maximum flexibility of payload volume and shipping cost efficiency
- Convenience of four-way forklift accessibility provides convenience and ease of loading in warehouse storage logistics. Attached tie-down strap system for quick loading and unloading
- Extended passive thermal shipping duration capabilities without messy, bulky gel/ice packs or dry ice
- No electricity or expensive refrigerated cargo shipping required, allowing for more transportation choices and an alleviated payload excursion risk due to power failure
- Multiple temperature ranges (frozen, refrigerated, and controlled room temp) with our patented interchangeable, easy packout TIC™ system with PCM (phase change material)

CRÉDO™ XTREME

DURATION

Full / Half Pallet:
96 - 144 Hours

SERIES 4 (2°C to 8°C)

SERIES 22
(15°C to 25°C)

SERIES 20M
(-25°C to -15°C)


PAYLOAD VOLUME

Full Pallet: 807 Liters
Half Pallet: 371 Liters

PRODUCT SPECIFICATIONS

Payload Size	Exterior Dimensions - Inches	Interior Dimensions - Inches	Tare Weight - lbs
SERIES 4			
Full Pallet 4C	48 x 40 x 53	40 x 32 x 38	560
Half Pallet 4C	48 x 40 x 31	40 x 32 x 17	377
SERIES 22			
Full Pallet 22C	48 x 40 x 53	40 x 32 x 38	560
Half Pallet 22C	48 x 40 x 31	40 x 32 x 17	377
SERIES 20M			
Full Pallet 20M	48 x 40 x 53	40 x 32 x 38	615
Half Pallet 20M	48 x 40 x 31	40 x 32 x 17	412

CreDo Xtreme Full Pallet - 15c-25c ISTATD Winter

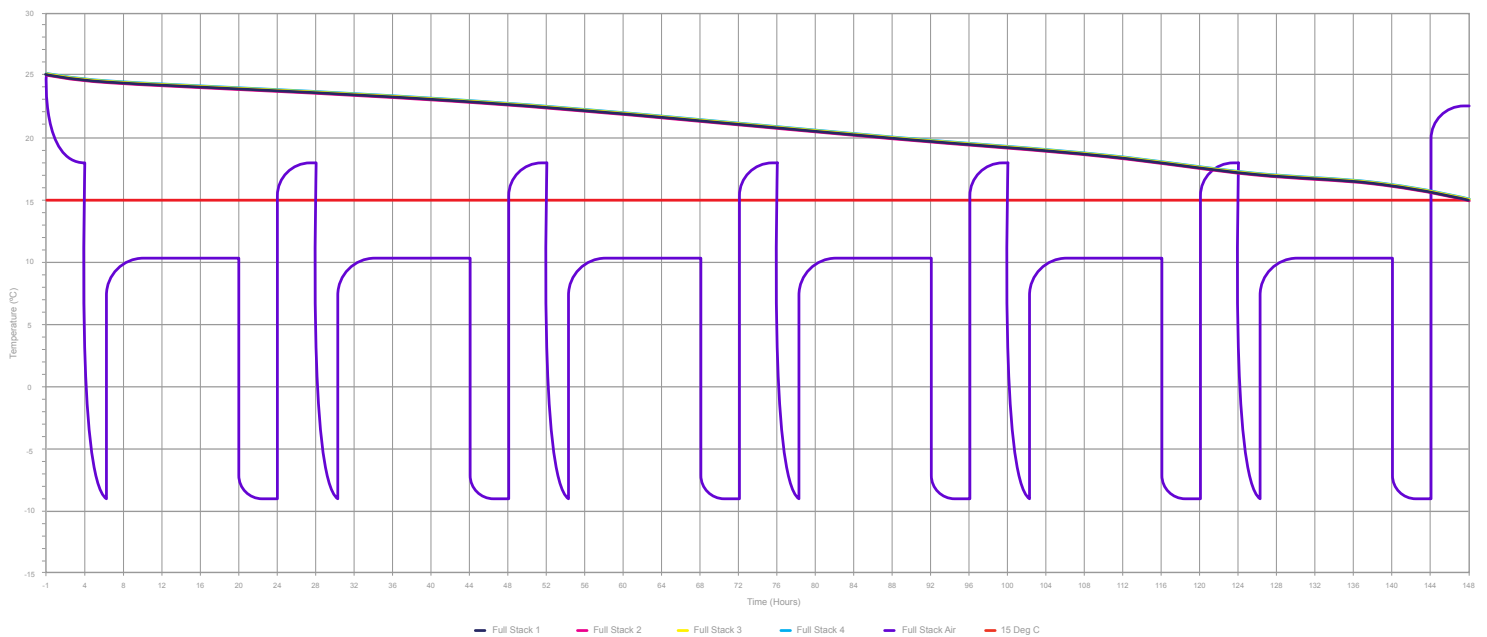

FOR MORE INFORMATION ABOUT PELICAN BIOTHERMAL PRODUCTS, PLEASE CONTACT:

INFO@PELICANBIOTHERMAL.COM T: +1 763 412 4800 PELICANBIOTHERMAL.COM

ISO17025, ISO9001-2008 Accredited

Golden Hour™, TIC™, Crêdo™, Crêdo Cube™, Crêdo ProEnvision™, Crêdo Xtreme™, Crêdo DURACUBE™, Crêdo ProMed™, Sherpa™ Systems, Chronos™ Express, Chronos™ Advance and CoolPall™ Vertos are registered trademarks of Pelican Products, Inc., its subsidiaries and/or affiliates.



©2018 PELICAN BioThermal all rights reserved.